
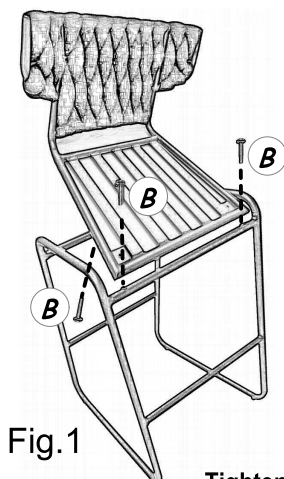


MH 9422 - Stool

REF.	DESCRIPTION	illustration	QUANTITY
A	<i>Allen key</i>		1
B	<i>1/4 allen screw</i>		3

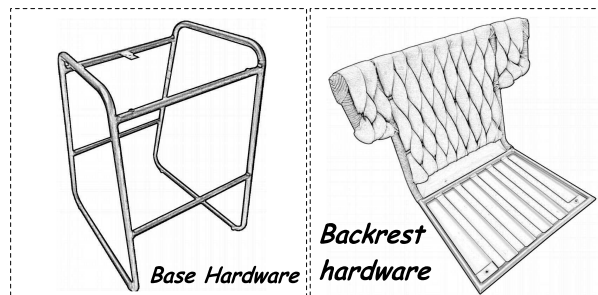

1 Step


Assemble the chair on a flat surface, using the packaging as protection.

NOTE: there are 3 fixing points per module

2 Step

Attach the seat/backrest hardware to the base hardware so that the holes and threaded rivets (fixing points) are aligned (fig. 1)

1 Screw at the back/bottom threaded from bottom to top

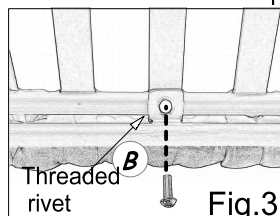

2 Screws front / top Threaded from top to bottom.


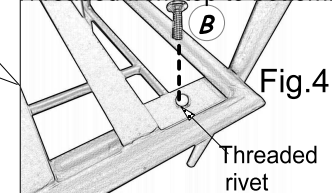


Fig.2

Tighten all screws until firm.

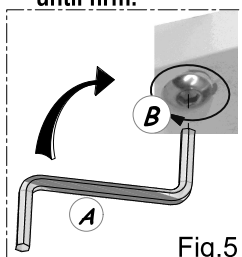

3 Step

Insert all the screws (B) into the fixing points, tightening them by hand,
1 fixing point from below/back (fig.3)
2 fixing points from above/front (fig.4)

4 Step

With all the screws inserted, make sure that the hardware is aligned and then tighten the screws with the Allen key (A) fig. 5



*Height adjustable shoes
*Used to correct slight irregularities in the surface


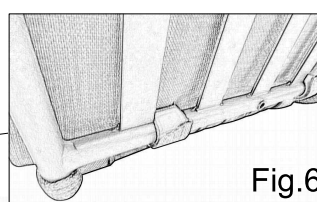


Fig.6

Attach the seat cushion with Velcro to the seat hardware at the back (fig.6);

Velcro behind/under the seat cushion

COSTUMER ORIENTATIONS :

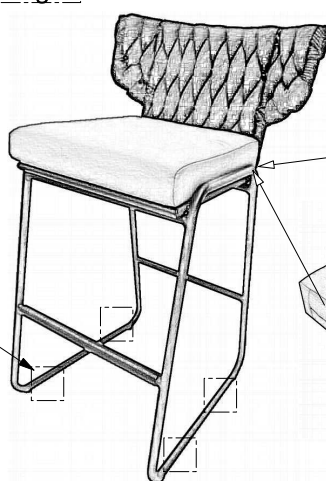

Do not use abrasive chemicals to clean. Avoid contact with cutting objects or prolonged sun;



Fabric: vacuum or use a soft brush to clean;
People: needed to assembly the product;

Assistência
(51)
3564-8382
contato@uultis.com
www.uultis.com

Figuras Meramente Ilustrativas