

MH 9900 – Bed with wooden frame

List of components

VOLUME 1

1380 x 1880mm / 1580 x 1980 mm / 1930 x 2030mm

REFERENCE	PIECE	QUANTITY
A	UPHOLSTERED HEADBOARD	1 (2 PARTS)

VOLUME 2

1380 x 1880mm / 1580 x 1980mm / 1930 x 2030mm

B	RIGHT SIDE	1
C	LEFT SIDE	1
D	BED FOOTBOARD	1
E	WOODEN FEET 180 x 70 x 45mm	6
F	METAL ANGLE BRACKET 150 x 150 x 100 x 4mm	4
F1	HEADBAR	1
-	FITTINGS BAG	1

VOLUME 3

1380 x 1880mm

G	BED SUPPORT 1390x60x30mm	4
H	WOODEN BALLAST	24

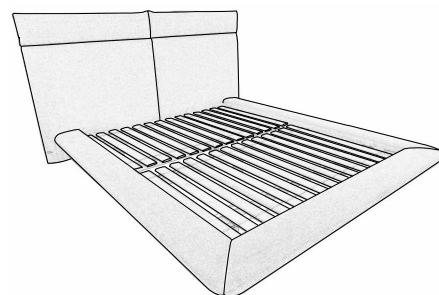
1580 x 1980mm

G	BED SUPPORT 1590x60x30mm	4
H	WOODEN BALLAST	28

1930 x 2030mm

G	BED SUPPORT 1940x60x30mm	4
H	WOODEN BALLAST	34

1380x1880 - 1580x1980 - 1930 X 2030mm



FITTING LIST

I FLAT HEAD SCREW 5X25 48	J FLAT HEAD SCREW 5X40 72	L SLAT SUPPORT 8	M PREGO C/ CAB 13 X 15 1380 - 48 1580 - 56 1930 - 68
		F METAL ANGLE BRACKET 4	F1 HEADBAR 1

I		48	
	Paraf. 5 X 25 mm		

J		18	
	Paraf. 5 X 40 mm		

L		8
----------	--	---

STEP 1

Attach both sides of the headboard through the hook, according to Figure 1.

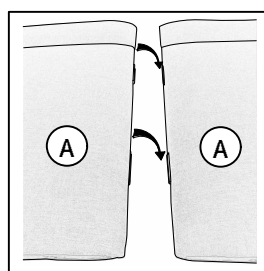


Fig.01

STEP 2

Attach the headbar (F1) according to Figure 2.

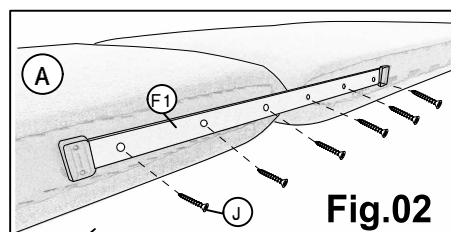


Fig.02

CONSUMER GUIDELINES :

Do not use chemical, abrasive or steam cleaning products. Avoid contact with sharp objects and prolonged sun exposure;




Fabric: vacuum cleaner or soft bristle brush;
Feet: cloth slightly moistened with water, followed by dry cloth;



Tool required: not provided;



People required for product assembly.

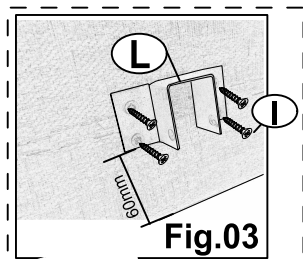
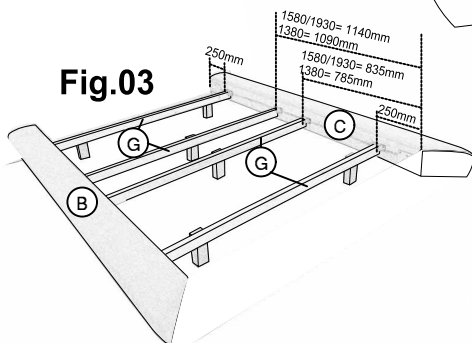


Assistance
(51)
3564-8382
contato@uultis.com
www.uultis.com

* IMAGE MERELY ILLUSTRATIVE.

STEP 3

Attach slat support (L) to sides (B,C) according to Figure 3.

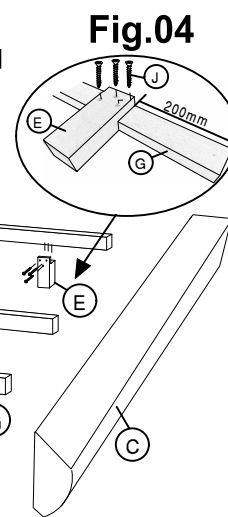
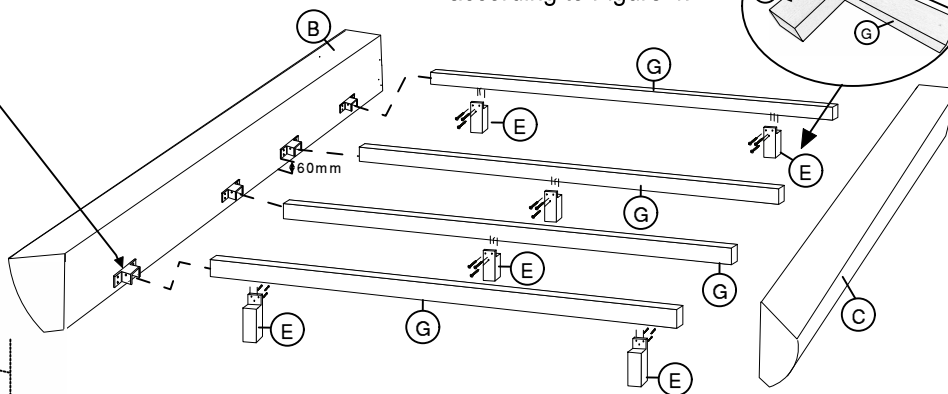
**Fig.03**

Headboard 1380 = 1390x60x30mm
Headboard 1580 = 1590x60x30mm
Headboard 1930 = 1940x60x30mm

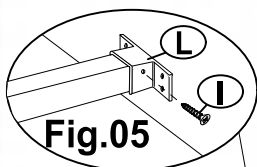
(G)

STEP 4

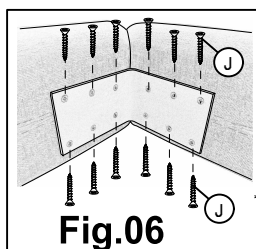
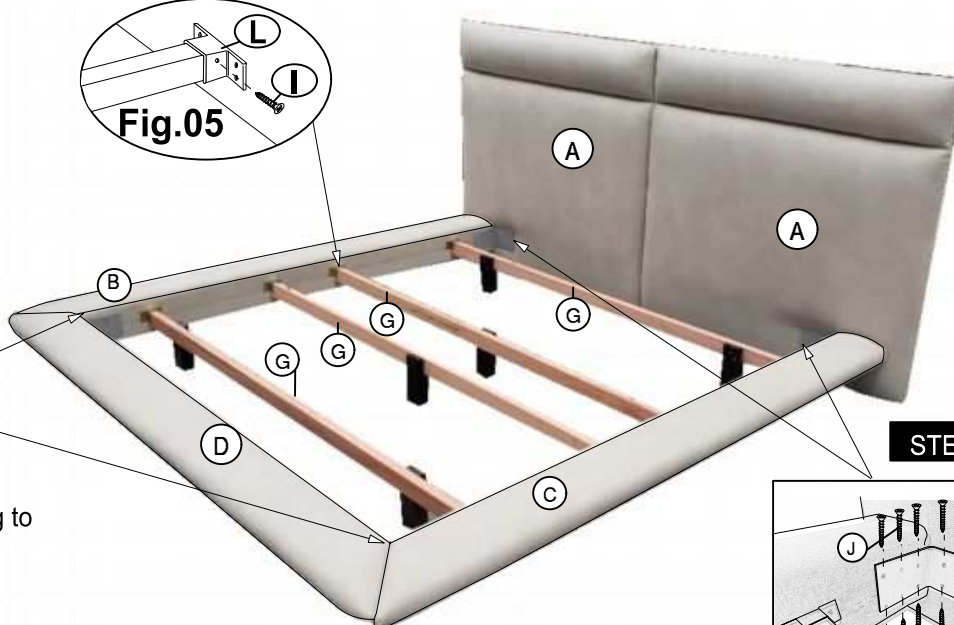
Attach the feet (E) to bed support (G) according to Figure 4.

**Fig.04****STEP 5**

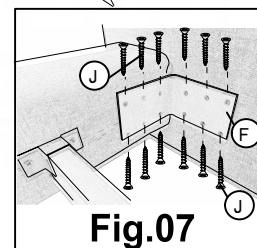
Before attaching the bed support (G) to the sides (B,C), assemble the ballast, according to Figure 5:

**Fig.05****STEP 6**

Attach the footboard (D) to the sides (B,C). Assemble to ballast according to Figure 6.

**Fig.06****STEP 7**

Attach the headboard (A) to the sides (B,C). Assemble to ballast according to Figure 7.

**Fig.07****STEP 8**

Attach with nail (M). Leave the string under the wooden ballast.

