

uultis

Assembly instructions

MH 9906 – Bed with wooden frame

List of components

VOLUME 1

1380 x 1880mm / 1580 x 1980 mm / 1930 x 2030mm

REFERENCE	PIECE	QUANTITY
A	UPHOLSTERED HEADBOARD	1

VOLUME 2

1380 x 1880mm / 1580 x 1980mm / 1930 x 2030mm

B	RIGHT SIDE	1
C	LEFT SIDE	1
D	BED FOOTBOARD	1

VOLUME 3

1380 x 1880mm

E	BED SUPPORT	1390x60x30mm	4
---	-------------	--------------	---

1580 x 1980mm

E	BED SUPPORT	1590x60x30mm	4
---	-------------	--------------	---

1930 x 2030mm

E	BED SUPPORT	1930x60x30mm	4
---	-------------	--------------	---

1380 x 1880 / 1580 x 1580mm / 1930 x 2030mm

F	WOODEN BALLAST	1
---	----------------	---

G	NAIL WITH HEAD 13X15mm	1380 - 48 PÇs
---	------------------------	---------------

1580 - 56 PÇs

1930 - 68 PÇs









KIT COMPONENTS

VOL. 3



FITTING LIST (vol.4)

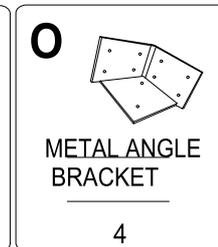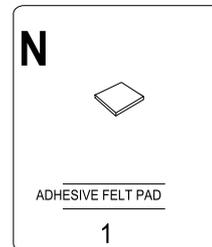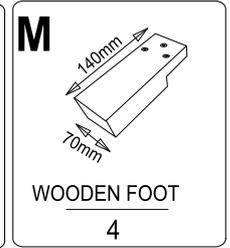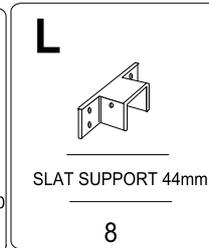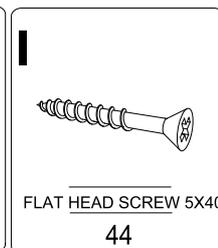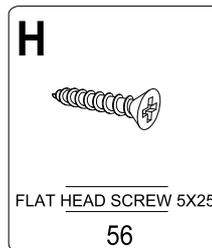

CONSUMER GUIDELINES :



Do not use chemical, abrasive or steam cleaning products. Avoid contact with sharp objects and prolonged sun exposure;



Fabric: vacuum cleaner or soft bristle brush;
Feet: cloth slightly moistened with water, followed by dry cloth;



Screwdriver

Tool required: not provided;



People required for product assembly.



Assistance

(51)


3564-8382

contato@uultis.com


www.uultis.com

* IMAGE MERELY ILLUSTRATIVE.

STEP 1.

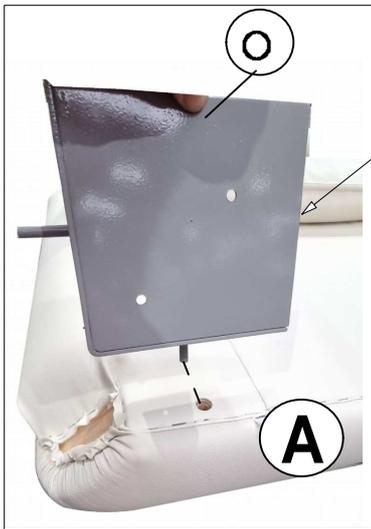


Fit the hardware (O) according to the part hole (A)

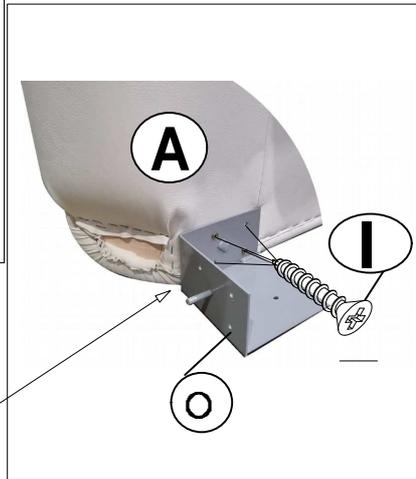


Leave aligned and secure with 4 screws (I)

STEP 2. Fit the hardware (O) according to the part hole (B,C)

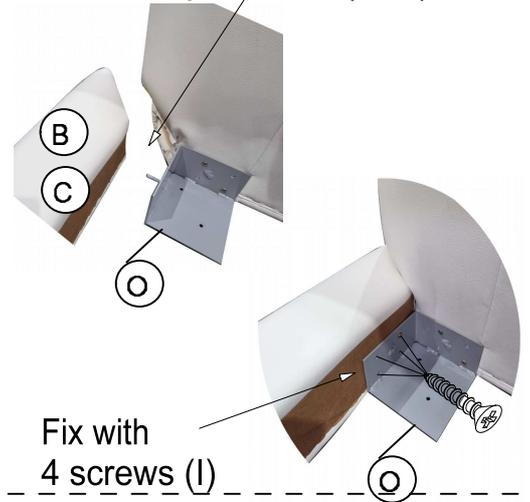

STEP 3

Attach the foot (P) to angle bracket (O).

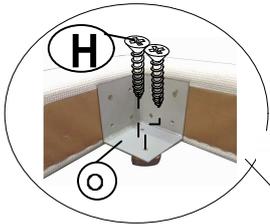


STEP 1

Screw the slat support (L) with flat head screw 5x25 (H) on the extremities of the slat support / bed support (E); Figure 1


STEP 2


Screw the middle wooden foot (M) with screws 5x40 (I) on the slat support / bed support (E); Figure 1

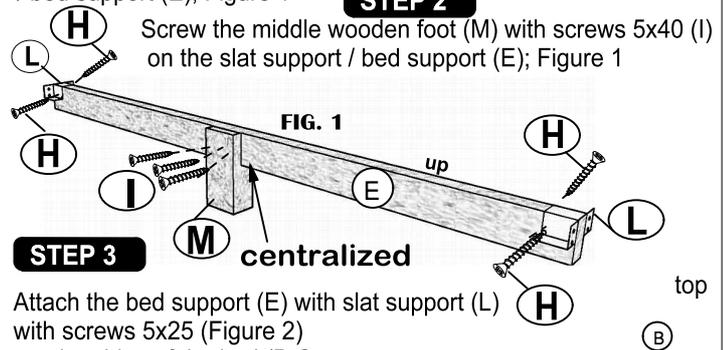

STEP 3

Attach the bed support (E) with slat support (L) with screws 5x25 (Figure 2) on the sides of the bed (B,C)

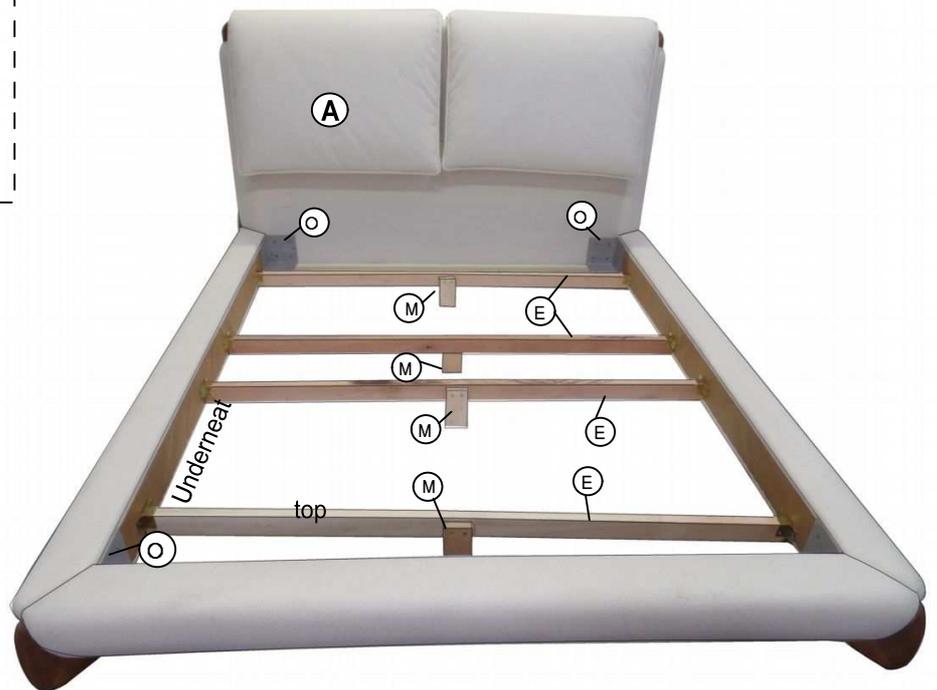

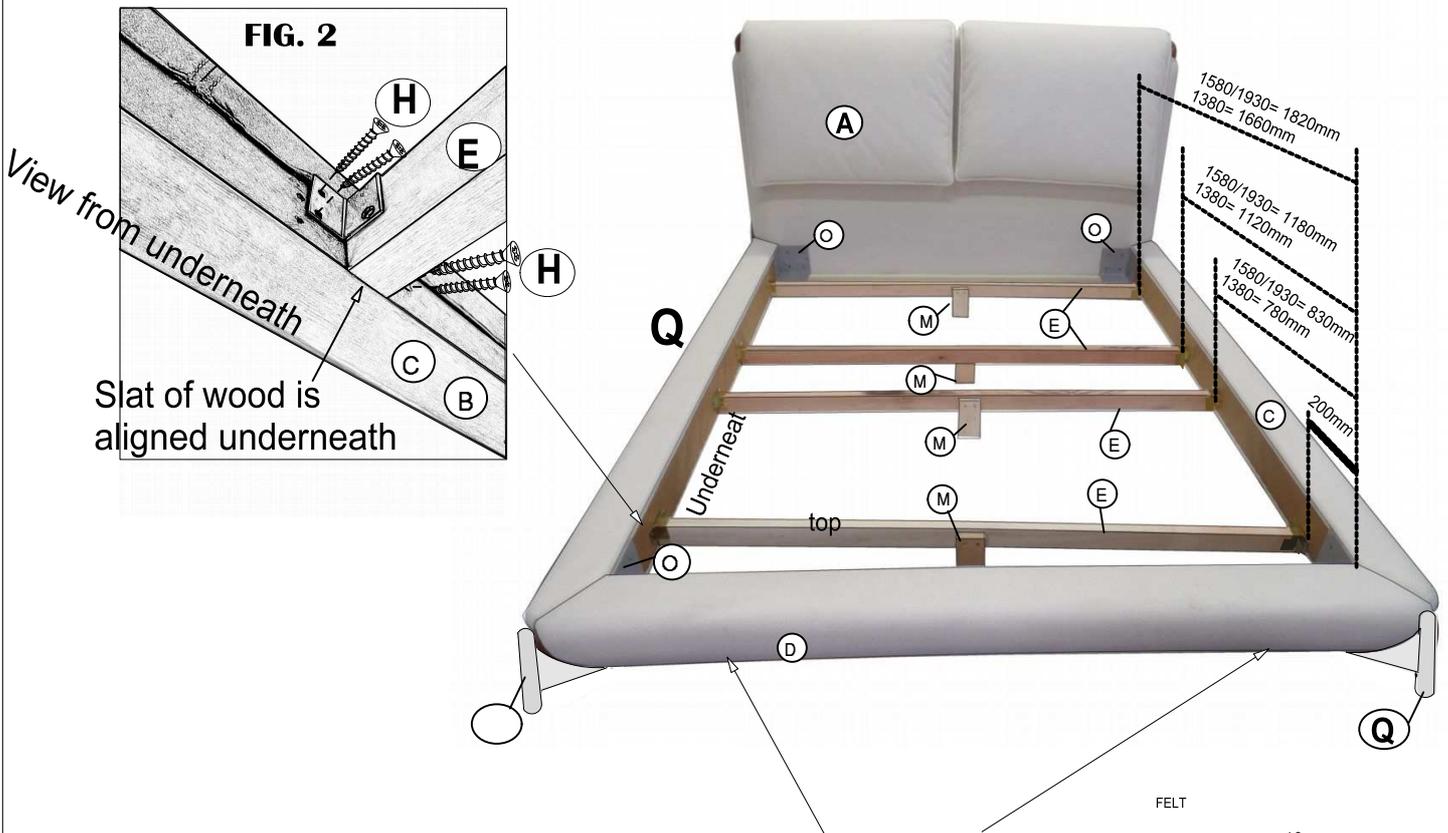

STEP 1.
Fit the hardware (O) according to the part hole (D)



Leave aligned and secure with 4 screws (I)


STEP 2.
Fit the hardware (O) according to the part hole (B,C)

Fix with 4 screws (I)

STEP 3
Attach the foot (P) to angle bracket (O).

1380x1880 - 1580x1980 - 1930 X 2030mm

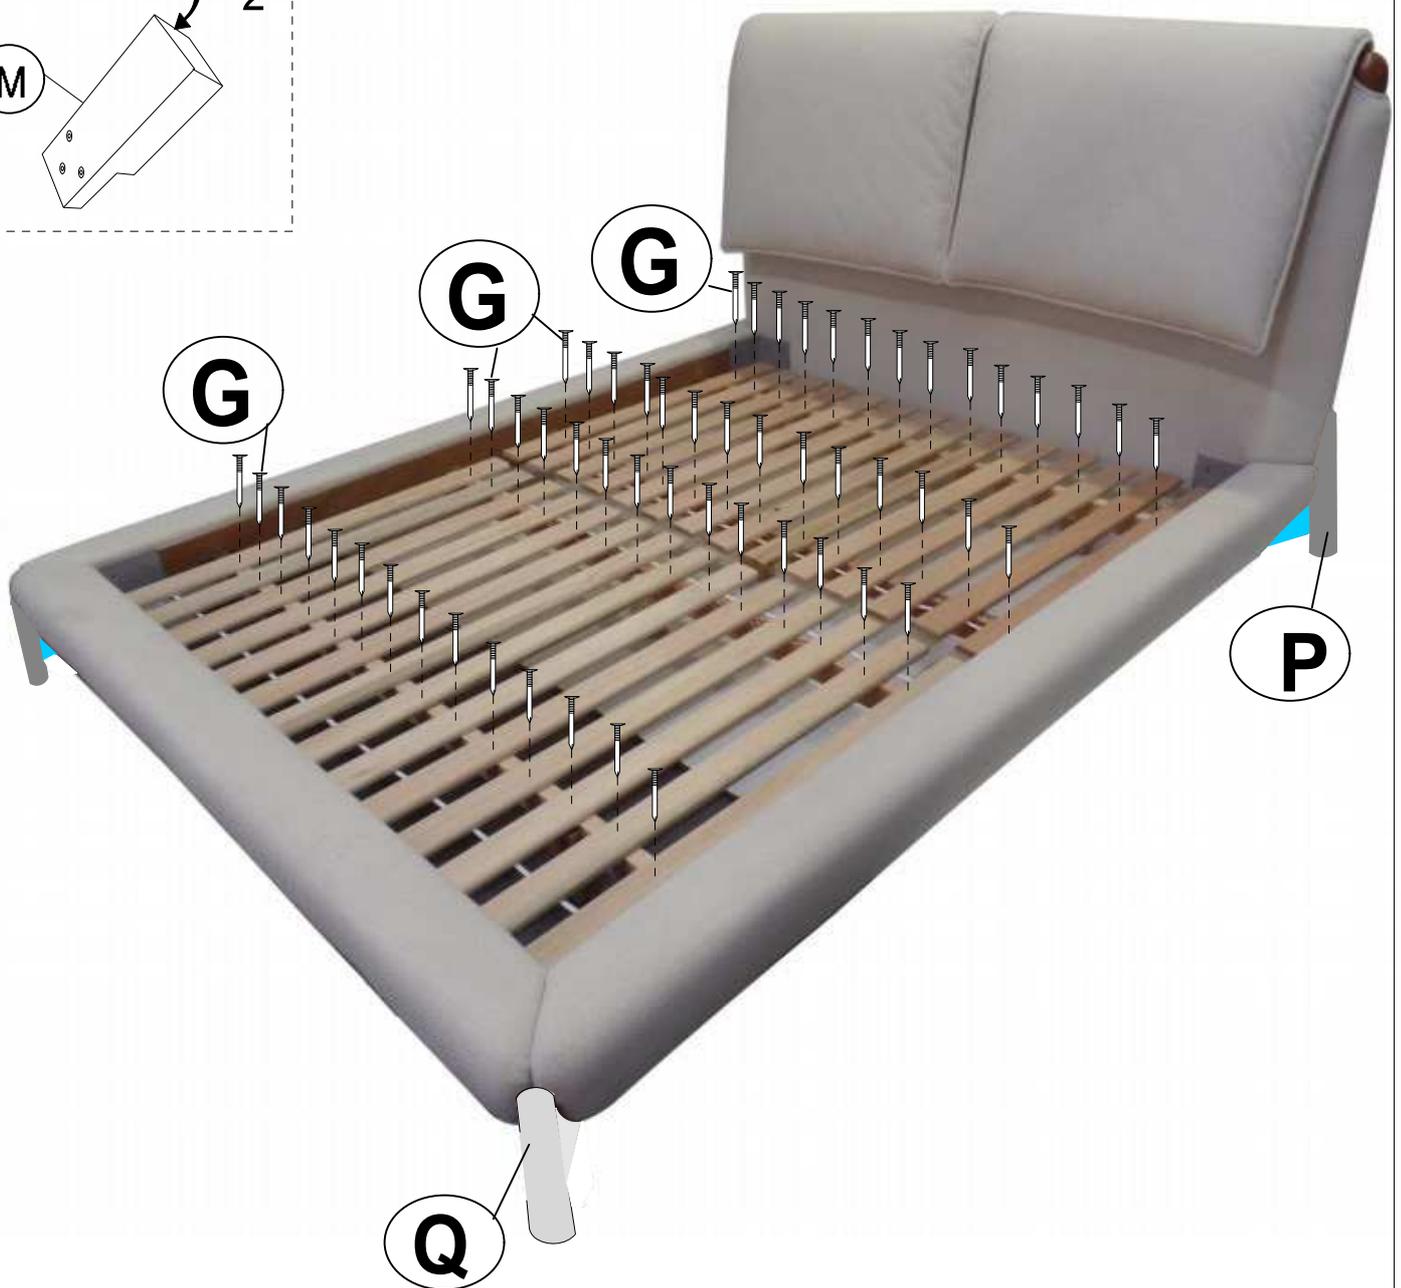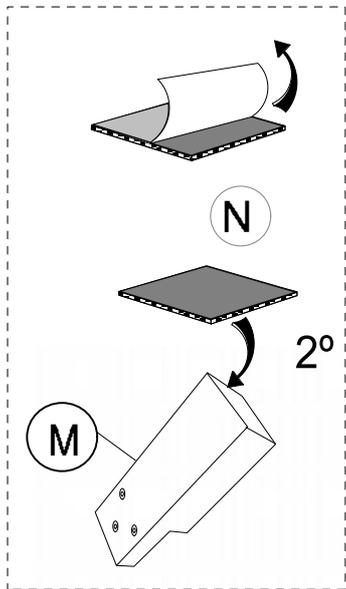

Ref.		Qty	
G		1380 - 48PÇs	
		1580 - 56PÇs	
		1930 - 68PÇs	

E :

Headboard .1380 =1390 x 60 x 30mm
 Headboard .1580=1590 x 60 x 30mm
 Headboard .1930=1930 x 60 x 30mm