

Modelo MH-9913

Cama 1530/1930mm

VOLUME 2

1530 X 1980MM / 1930 X 2030MM

A	RIGHT SIDE BED	1
B	LEFT SIDE BED	1
C	BED FOOTBOARD	1

VOLUME 3

1530 X 1980MM

E	BED SUPPORT	4
---	-------------	---

1930 X 2030MM

E	BED SUPPORT	4
---	-------------	---








N	WOODEN BALLAST	2
---	----------------	---

G	NAIL HEAD 13X15	1530- 56PÇ / 1930- 68PÇ
---	-----------------	-------------------------

VOLUME 4



D	WOODEN FEET 180 X 70 X 45MM	6
---	-----------------------------	---

COMPONENTES DOS KIT'S

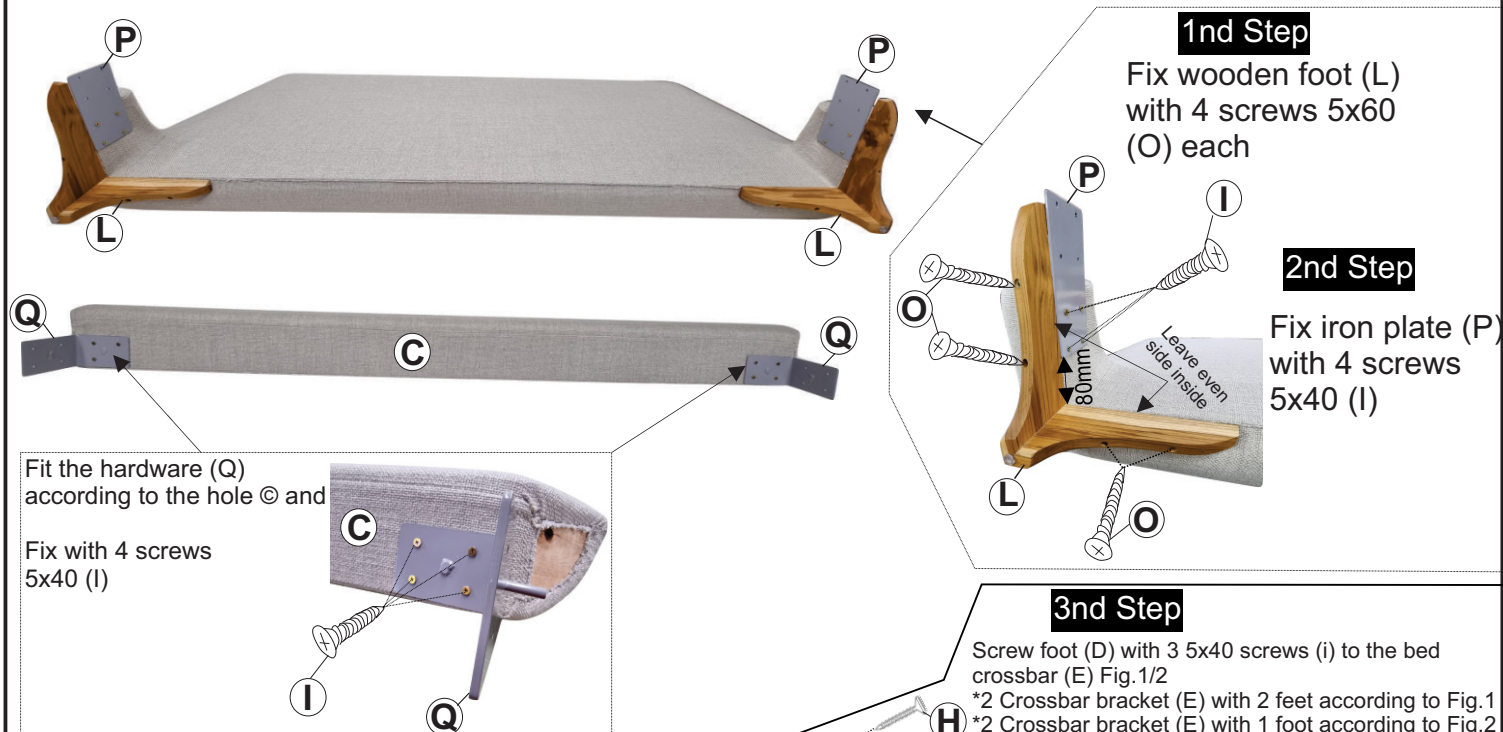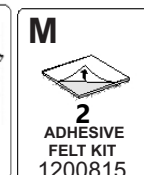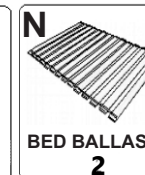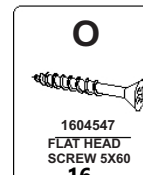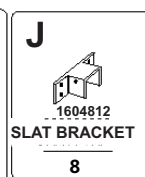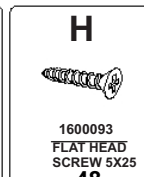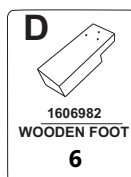

4nd Step

Screw metal bracket (M) with 5x25 screw (H) at the ends of the bracket/ crossbar (E) Fig.1/2

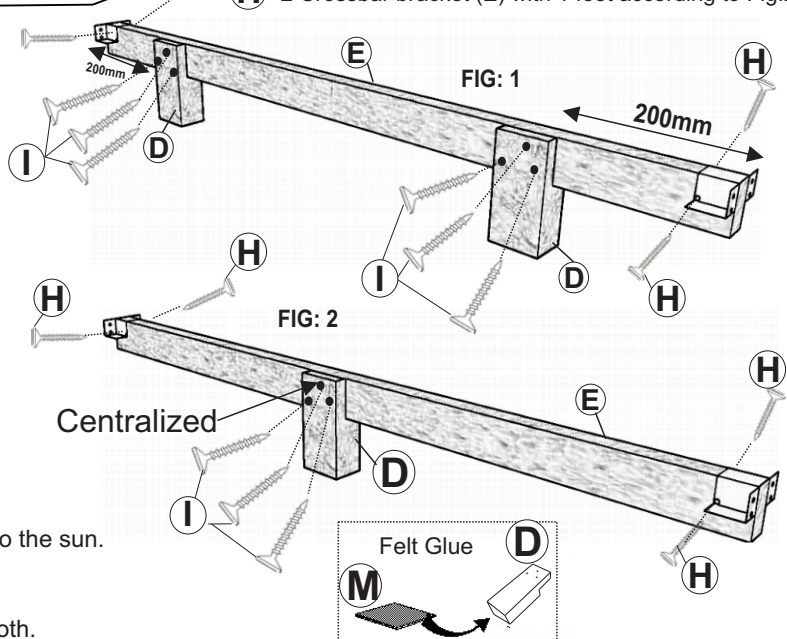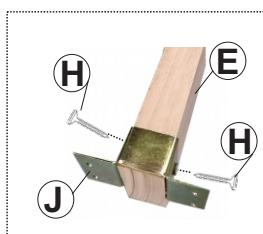

CONSUMER GUIDELINES:

Do not use chemicals, abrasives or steam cleaning.
Avoid contact with sharp objects and prolonged exposure to the sun.



Fabric: vacuum cleaner brush with soft bristles;
Feet: cloth slightly dampened with water, second of dry cloth.

5rd Step:

*Fix Hardware (Q) on the side (A,B,C) with 4 5x40 screws as per (fig: 4)

*After fixing 1 pc (E) Bed support as an internal measurement (fig.3)

FIG:4

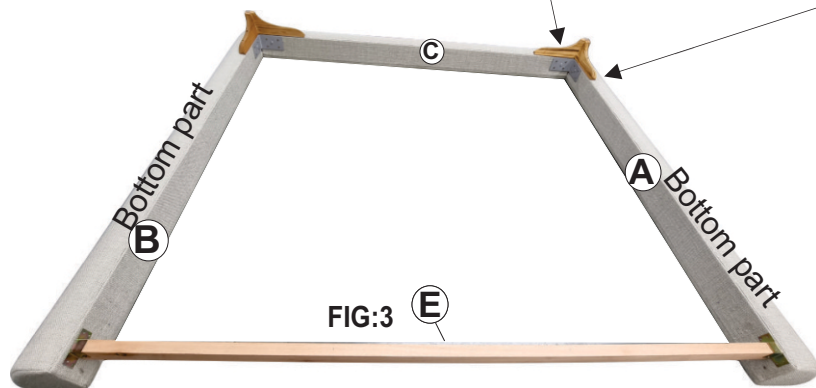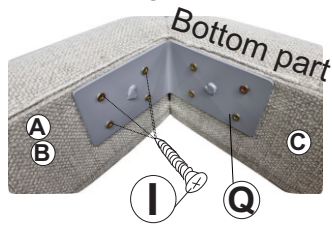


6rd Step:

*Fix the foot (L) to the side (A,B,C) with 4 5x60 screws (O) as per (fig: 5)

Pag: 2de2


FIG:5

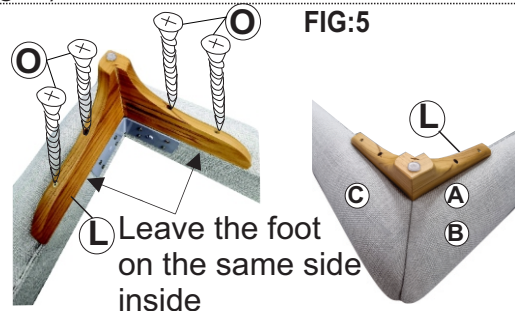

7rd Step:

Fix Hardware (J) with 4 Screws 5x25 in (A) - (B) as shown in fig:6




FIG:6

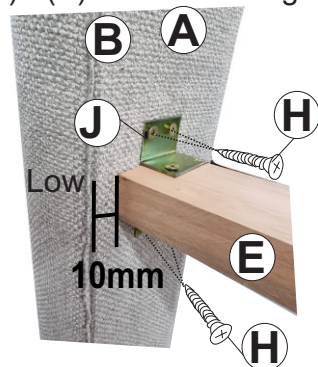

8rd Step:

Fix iron plate (P) with 4 screws 5x40 (I)


FIG:7

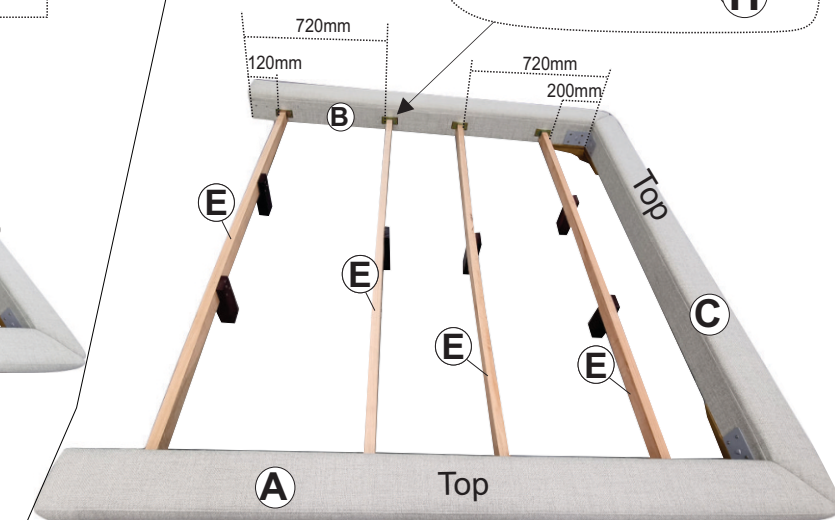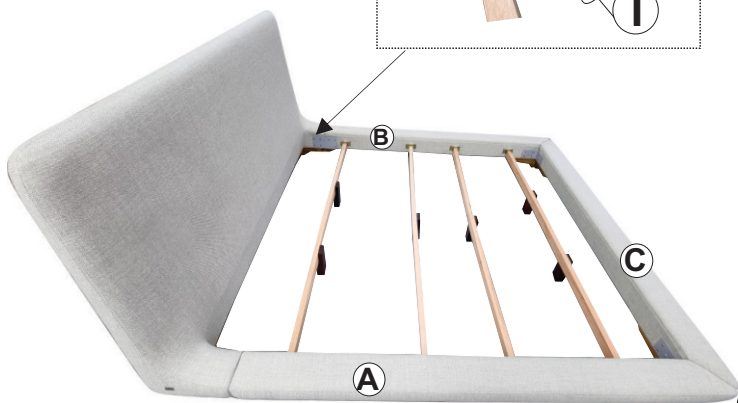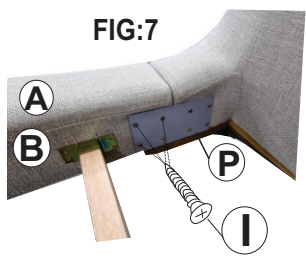


9rd Step:

*Leave string on the underside ballast (N) of the wood

*Fix with nail (G) in all the wood of the ballast

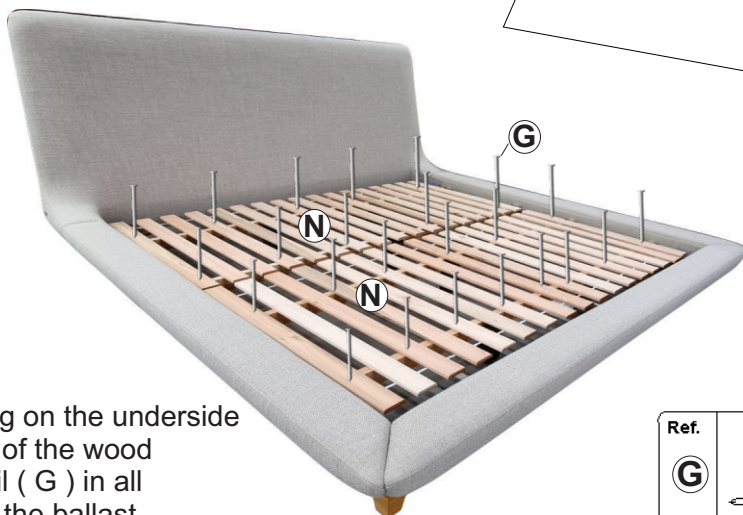

Ref.		Qtd	
G		1530- 56PÇ 1930- 68PÇ	



3564-8382

can to buy it.com

www.uh3.com

* IMAGE MERELY ILLUSTRATIVE.